

## E Owner Responsibility

 
In order to ensure operator safety and maintain your APEX Ramp properly, it is the responsibility of the product owner to read and follow these instructions:

- Follow all setup, operation, and cleaning / maintenance instructions.
- Verify product setup and use conforms to all applicable local, state, and federal codes, rules, and regulations, such as state and federal OSHA regulations.
- Read and follow all safety instructions. Keep them readily available for all operators.
- Ensure all operators are properly trained, know how to safely use the ramps, and are properly supervised.
- Do **not** use these ramps until you are certain all components are in place and operating correctly, and that the ramps are correctly attached to the HD Series Lift, using the appropriate Ramp Receiver Brackets.
- Carefully inspect the APEX ramps on a regular basis and perform all cleaning and maintenance as specified.
- Service and maintain the ramps (and Receiver Brackets) only with approved replacement parts.
- Keep all instructions permanently with the product and make sure all labels are clean and visible. BendPak makes no promises, guarantees or assurances that our products meet any state, county, federal or international mandated permit, license, code, standard, certification, or any other mandate other than what is listed or shown on BendPak website(s), or any BendPak or APEX online or published catalog. Buyer assumes **full responsibility** for any state, county, federal or international mandated permit, license, code, standard, certification, or any other mandate required related to the installation and/or operation of any BendPak or APEX product in their locale. BENDPAK will not be responsible for any charges, fines, liens, or other levies imposed on the Buyer related to any special or regional structural, seismic or any other building code and/or codes such as the Uniform Building Code (UBC), International Building Code (IBC), or any other state, county, federal or international mandated permit, license, code, standard, certification, or other mandate, law, rule, regulation or directive by any other agency, government, administrations, or corporations whether state, county, federal, or international mandated.
- **Only** use the APEX Ramps if they can be used *safely*!
- These safety and operating instructions are subject to change without notice.

## 6 Cleaning and maintaining APEX Garage Ramps

Keep ramps broom-clean. When ramps become dirty, wash with mild soap or detergent and water. Avoid harsh chemicals, bleaches, or acids, which can damage them. Prevent point loads: remove small items, gravel, or debris that could fall on the ramps. Point loads (in which weight is concentrated through a small surface area instead of being evenly distributed) can damage the ramps. APEX Ramps are designed to support evenly distributed tire loads only. Protect from heat.

APEX Garage Ramps are built to last for years with proper care. Avoid exposing APEX ramps to high temperatures or placing hot items on them, as this can cause deformation.

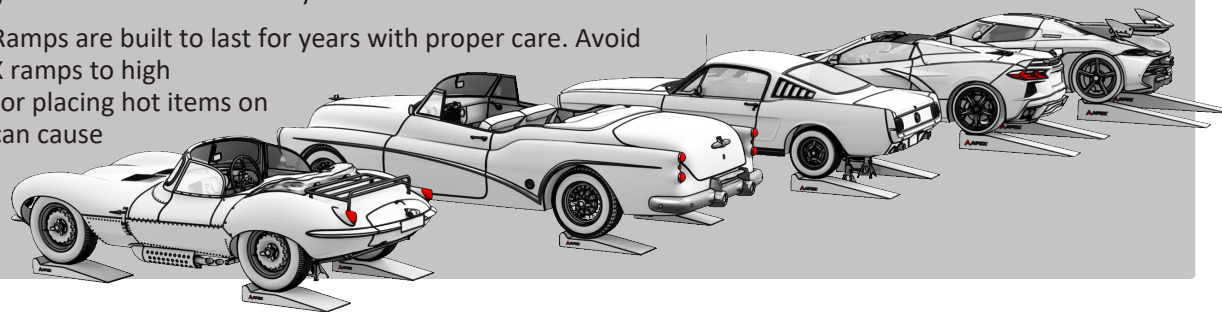

## F NEED HELP?

Leave the QuickStart Guide for the owner/operator.

If you need more help, visit us at [bendpak.com/support](http://bendpak.com/support) or email us at [support@bendpak.com](mailto:support@bendpak.com)



APEX Garage Ramp

**BendPak**  
30440 Agoura Road  
Agoura Hills, CA 91301



P/N 5900831 - Rev A - January 2026

## QUICK-START GUIDE



**MODELS:**  
**APEX Garage Ramps:**  
AR-340-95-GR / 36"  
AR-460-95-GR / 48"  
AR-580-95-GR / 60"  
AR-610-95-GR / 72"

## A About APEX Ramps

APEX Garage Ramps provide a gentle slope to ensure easy on and off for most vehicles to be worked on in a residential garage.

 
Constructed from HDPE Foam, coated with Black Polyurea Elastomer, APEX rugged and durable engineered foam ramps will support a maximum of 1,750 lbs. (794 kg) of evenly distributed wheel weight on each ramp.

APEX Garage Ramps are designed expressly to raise and support vehicles in a residential or automotive enthusiast's garage setting, or even small automotive service garages.

## B Important Safety Instructions

- Read these instructions prior to using the ramps; keep these instructions with the APEX Ramps.
- Wet tires are slippery: APEX Ramps are safest when used on dry tires, and on non-slip floors and surfaces.
- This product is comprised of vehicle ramps with integral tire endstops: use only for its intended purpose.
- **Always** clear personnel and obstructions away from the vehicle path and the ramps while in use.
- **Always** inspect the ramps for damage and safety prior to use.
- **Always** verify all required equipment is present, in good condition, and the ramps are safe to use.
- **Always** use APEX ramps on flat, smooth, and level surfaces.
- **Always** safely raise vehicle's wheels in stable pairs (front pair, rear pair, or all four) for stability and safety.
- **Always** set **chocks** or deploy **jack stands** **prior** to anyone working under or near any raised vehicle.
- **Always** clean the surface to remove debris that may damage the ramps when loaded with a vehicle's weight.
- **Always** verify sufficient space and no obstructions to interfere with vehicle's approach and exit from ramps.
- **Always** use a spotter to assist in aligning and driving the vehicle slowly and carefully onto and off the ramps.
- **Never** exceed the rated capacity of 1,750 lbs. (794 kg) evenly distributed wheel weight on each ramp.
- **Never** modify the ramps.
- **Never** use APEX Ramps on slippery floors or surfaces; if unsure, add non-slip mats or tape to prevent slips.
- **Never** use damaged ramps: only use ramps if it is safe to do so.
- **Never** use jack stands or jacks **on** the ramp surfaces.
- **Never** exceed the recommended maximum tire width of 14 in. (35.5 mm).
- **Never** allow APEX Ramps to touch hot surfaces or items.

**NEVER** Steer  
ON Ramps!!

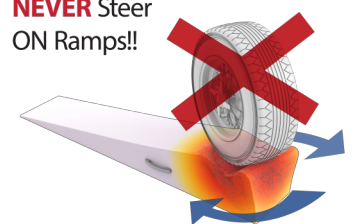

APEX Garage Ramp

P/N 5900831 - Rev A - January 2026

### ⚠ DANGER

Calls attention to an immediate hazard that will result in death or severe personal injury.

### ⚠ WARNING

Calls attention to a hazard or unsafe practice that could result in death or severe personal injury.

### ⚠ CAUTION

Calls attention to a hazard or unsafe practice that could result in minor personal injury, product or property damage.



### TIP

Calls attention to information that can help you use your APEX Ramps in the best way.



## Driving onto the APEX Garage Ramps

1. Verify that the area where you will be using the Garage Ramps is flat and will support the ramp along its full length. Any depression under the ramp may deform or damage the ramp when the vehicle is rolled over it - this includes damaged concrete and other common floor defects.
2. Verify there are **no** stones or other debris under the ramp that will damage the ramp when the full weight of the vehicle is rolling over.
3. Move the **Apex Garage Ramps** to the area where the vehicle is to be stored or worked on.
4. Move the vehicle into the work area, and carefully align the front and rear wheels so that they are straight and directly in line with the **Apex Garage Ramps**.
5. Have a spotter observe the vehicle as it is carefully driven onto the ramps. The spotter is to provide feedback to the driver, ensuring the vehicle is moving straight onto the ramps and the tires remain centered. The spotter should also warn personnel to remain clear of the area.
6. Slowly and cautiously drive onto the ramps while taking direction from the spotter. Drive straight, keeping the wheels centered on the ramps. If ramps or vehicle slide, STOP for safety's sake and adjust.

**⚠ WARNING** APEX Ramps are designed to support 1,750 lbs. distributed over the contact area of a typical vehicle tire. **NEVER** move heavy objects with small tires or casters (e.g. tool boxes or machines) over the APEX Ramps. They will *permanently* deform and damage APEX Ramps.

7. **Stop** when the vehicle reaches the endstop on the **Apex Garage Ramp**, shift into Park, apply the parking brake and shut off the engine.

 
**⚠ WARNING** Do **not** allow any wheel to extend over the edge of either ramp! Once the vehicle reaches the endstop on the **Apex Garage Ramp** shift into park (reverse gear, if a manual transmission) and turn off the engine.

8. Exit the vehicle cautiously, stepping down carefully from the now-elevated vehicle to the floor.
9. Set wheel chocks to secure vehicle as required; if planning to work beneath vehicle, **set Jack Stands**.




## Driving off the APEX Garage Ramps


1. *Verify* the exit route is clear of personnel and obstructions.
2. Verify the wheels of the vehicle are correctly aligned with both APEX Ramps and intended path of travel.
3. Start the engine.
4. Place your foot on the vehicle brake and then release the parking brake.
5. Shift into reverse or forward as required to exit.
6. Have a spotter outside the vehicle observe and guide the driver straight off the ramps.
7. Drive off **slowly** and **carefully**.
8. Drive the vehicle down the ramps until it is on the garage floor and has completely cleared the ramps.
9. Place the vehicle in park and shut off the engine.
10. Secure the vehicle as appropriate; **clean** and store APEX Garage Ramps.

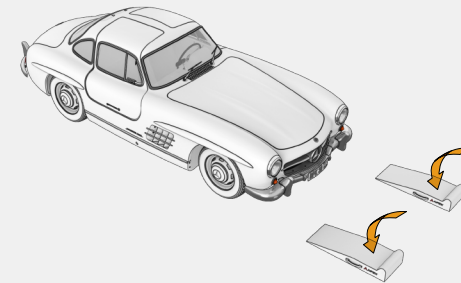

*Align wheels*

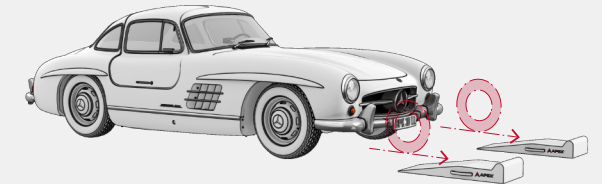 


*Drive onto*

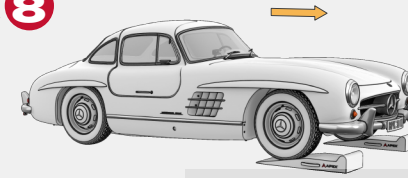 

*Drive on; stop at endstop*



 *Set parking brake; set chocks or jack stands*

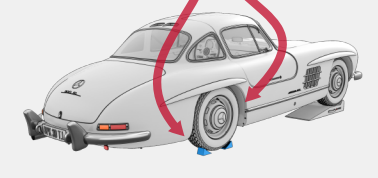


**Carefully reverse** above method to lower vehicle from APEX Garage Ramps

AR-340-95-GR KIT, SET OF 2: 5174139



 
AR-460-95-GR KIT, SET OF 2: 5174146

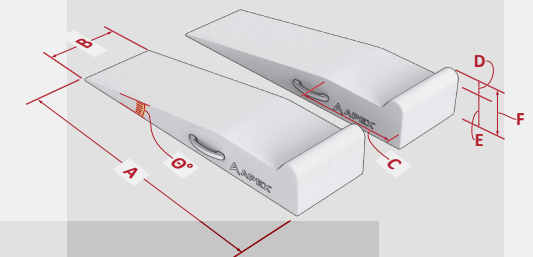

AR-580-95-GR KIT, SET OF 2: 5174158



 AR-6100-95-GR KIT, SET OF 2: 5174162

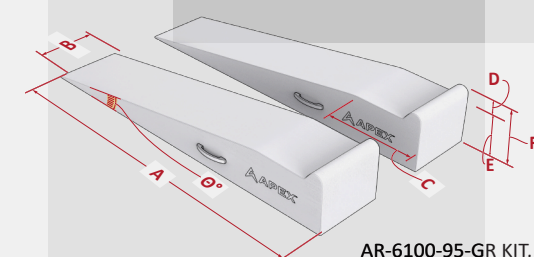

| Part Number | Description                                | Dim Ø (Ramp Angle) | Dim A (Length)  | Dim B (Width)     | Dim C (Tire Rest Length) | Dim D (Wheelstop Height) | Dim E (Tire Rest Height) | Dim F (Total Height) |
|-------------|--------------------------------------------|--------------------|-----------------|-------------------|--------------------------|--------------------------|--------------------------|----------------------|
| 5174138     | Lightweight Garage Ramp, 36 in. (914 mm)   | 9.4°               | 36 in (914 mm)  | 14 in (355 mm)    | 11 in (280 mm)           | 2 in (52 mm)             | 4 in (100 mm)            | 3.5 in (152 mm)      |
| 5174145     | Lightweight Garage Ramp, 48 in. (1,219 mm) | 9.5°               | 48 in (1219 mm) | 13.25 in (335 mm) | 10.75 in (272 mm)        | 2 in (52 mm)             | 6 in (152 mm)            | 8 in (203 mm)        |
| 5174157     | Lightweight Garage Ramp, 60 in. (1,524 mm) | 9.5°               | 60 in (1524 mm) | 14 in (355 mm)    | 10.75 in (273 mm)        | 2 in (52 mm)             | 8 in (203 mm)            | 10 in (254 mm)       |
| 5174163     | Lightweight Garage Ramp, 72 in. (1,829 mm) | 5.5°               | 72 in (1829 mm) | 14 in (355 mm)    | 10.75 in (273 mm)        | 2 in (51 mm)             | 10 in (254 mm)           | 12 in (305 mm)       |