

E Owner Responsibility

 
In order to ensure operator safety and maintain your APEX Ramp properly, it is the responsibility of the product owner to read and follow these instructions:

- Follow all setup, operation, and cleaning / maintenance instructions.
- Verify product setup and use conforms to all applicable local, state, and federal codes, rules, and regulations, such as state and federal OSHA regulations.
- Read and follow all safety instructions. Keep them readily available for all operators.
- Ensure all operators are properly trained, know how to safely use the ramps, and are properly supervised.
- Do **not** use these ramps until you are certain all components are in place and operating correctly, and that the ramps are correctly oriented to the Trailer's ramps, resting on the appropriate Ramp Receiver Cutaways.
- Carefully inspect the APEX ramps on a regular basis and perform all cleaning and maintenance as specified.
- Service and maintain the ramps only with approved replacement parts.
- Keep all instructions permanently with the product and make sure all labels are clean and visible. BendPak makes no promises, guarantees or assurances that our products meet any state, county, federal or international mandated permit, license, code, standard, certification, or any other mandate other than what is listed or shown on BendPak website(s), or any BendPak or APEX online or published catalog. Buyer assumes **full responsibility** for any state, county, federal or international mandated permit, license, code, standard, certification, or any other mandate required related to the installation and/or operation of any BendPak or APEX product in their locale. BENDPAK will not be responsible for any charges, fines, liens, or other levies imposed on the Buyer related to any special or regional structural, seismic or any other building code and/or codes such as the Uniform Building Code (UBC), International Building Code (IBC), or any other state, county, federal or international mandated permit, license, code, standard, certification, or other mandate, law, rule, regulation or directive by any other agency, government, administrations, or corporations whether state, county, federal, or international mandated.
- **Only** use the APEX Ramps if they can be used *safely*!
- These safety and operating instructions are subject to change without notice.

6 Cleaning and maintaining APEX Trailer Ramps

Keep ramps broom-clean. When ramps become dirty, wash with mild soap or detergent and water. Avoid harsh chemicals, bleaches, or acids, which can damage them. Prevent point loads: remove small items, gravel, or debris that could fall on the ramps. Point loads (in which weight is concentrated through a small surface area instead of being evenly distributed) can damage the ramps. APEX Ramps are designed to support evenly distributed tire loads only. Protect from heat.

APEX Trailer Ramps are built to last for years with proper care. Avoid exposing APEX ramps to high temperatures or placing hot items on them, as this can cause deformation.

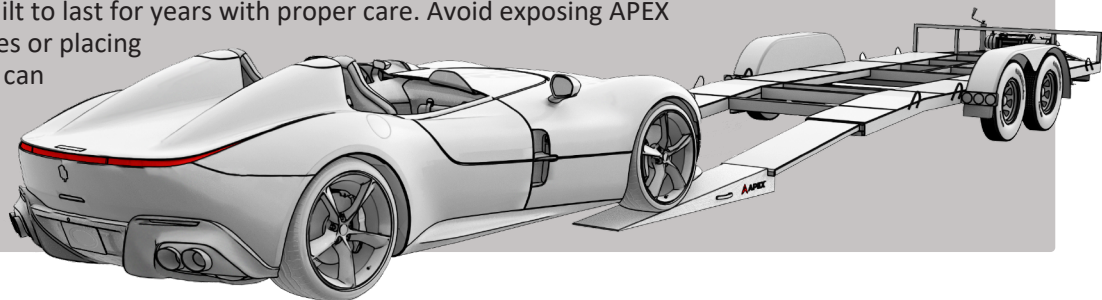

F NEED HELP?

Leave the QuickStart Guide for the owner/operator.

If you need more help, visit us at bendpak.com/support or email us at support@bendpak.com



 
APEX Trailer Ramps

BendPak
30440 Agoura Road
Agoura Hills, CA 91301



P/N 5900832 - Rev A - January 2026

QUICK-START GUIDE

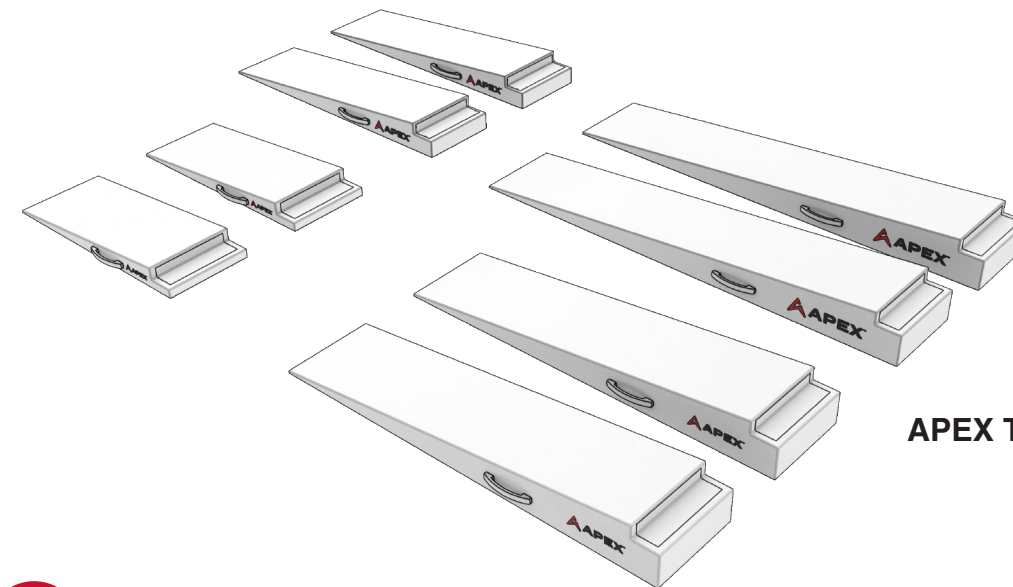

MODELS:

APEX Trailer Ramps for Low Cars:

AR-335-54-TR / 36"

AR-450-58-TR / 48"

AR-570-66-TR / 60"

AR-670-55-TR / 72"

A About APEX Ramps

APEX Trailer Ramps provide a gentle slope to ensure safe loading for low ground clearance vehicles onto a transport trailer.

 
Constructed from HDPE Foam, coated with Black Polyurea Elastomer, APEX rugged and durable engineered foam ramps will support a maximum of 1,750 lbs. (794 kg) of evenly distributed wheel weight on each ramp.

APEX Trailer Ramps are designed expressly for loading vehicles onto a transport trailer, so they have integral steel stepped ends to support typical metal trailer ramps or direct trailer edges, according to need.

B Important Safety Instructions

- Read these instructions prior to using the ramps; keep these instructions with the APEX Ramps.
- Wet tires are slippery: APEX Ramps are safest when used on dry tires, and on non-slip floors and surfaces.
- This product is comprised of vehicle ramps with integral stepped ends: use only for its intended purpose.
- Always clear personnel and obstructions away from the vehicle path and the ramps while in use.
- Always inspect the ramps for damage and safety prior to use.
- Always verify all required components are present, in good condition and the ramps are safe to use.
- Always use APEX ramps on flat, smooth, and level surfaces.
- Always clean the surface to remove debris that may damage the ramps when loaded with a vehicle's weight.
- Always verify there is sufficient space and no obstructions to interfere with the vehicle's approach and exit from the ramps.
- Always use a spotter to assist in aligning and driving the vehicle slowly and carefully onto and off the ramps.
- Never exceed the rated capacity of 1,750 lbs. (794 kg) evenly distributed wheel weight on each ramp.
- Never modify the ramps.
- Never use APEX Ramps on slippery floors or surfaces; if unsure, add non-slip mats or tape to prevent slips.
- Never use damaged ramps: only use ramps if it is safe to do so.
- Never use jack stands or jacks on the ramp surfaces.
- Never exceed the recommended maximum tire width of 14 in. (35.5 mm).
- Never allow APEX Ramps to touch hot surfaces or items.

NEVER Steer
ON Ramps!!

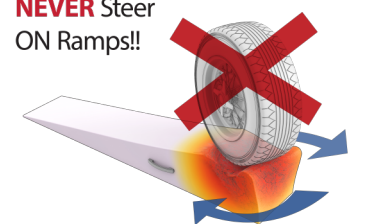

APEX Trailer Ramps

P/N 5900832 - Rev A - January 2026

⚠️ DANGER

Calls attention to an immediate hazard that will result in death or severe personal injury.

⚠️ WARNING

Calls attention to a hazard or unsafe practice that could result in death or severe personal injury.

⚠️ CAUTION

Calls attention to a hazard or unsafe practice that could result in minor personal injury, product or property damage.

💡 TIP

Calls attention to information that can help you use your APEX Ramps in the best way.

C Driving (or winching) onto the APEX Trailer Ramps

1. Verify that the area where you will be using the Trailer Ramps is flat and will support the ramp along its full length. Any depression under the ramp may deform/damage the ramp when the vehicle is rolled over.
2. Verify there are **no** stones or other debris under the ramp that will damage the ramp when the full weight of the vehicle is rolling over.
3. Move the trailer and the Apex Ramps to the appropriate area, being sure to leave adequate space for driving on and off. Place trailer's ramps *carefully* onto APEX Trailer Ramp Cutaway Support Area.
4. Move the vehicle into the work area, and carefully align the front and rear wheels so that they are straight and directly in line with the trailer and the APEX Trailer Ramps.
5. Have a spotter observe the vehicle as it is carefully driven or winched onto the ramps. The spotter is to provide feedback to the driver, or winch operator, ensuring the vehicle is moving straight onto the ramps and the tires remain centered. The spotter should also warn people to remain clear of the area while vehicle is in motion.

⚠️ **WARNING** APEX Ramps are designed to support 1,750 lbs. distributed over the contact area of a typical vehicle tire. **NEVER** move heavy objects with small tires or casters (e.g. tool boxes or machines) over the APEX Ramps, or rest them on the APEX Ramps. They will *permanently* deform and damage APEX Ramps.

6. Slowly and cautiously drive onto the ramps while taking direction from the spotter. Drive straight, keeping the wheels centered on the ramps. If ramps or vehicle slide, STOP for safety's sake and adjust. If winching, put vehicle in neutral, and go slowly and steadily, checking alignment frequently.

 
⚠️ **WARNING** Do **not** allow any wheel to extend *over* the edge of either ramp! Once the vehicle has reached the trailer endstop, shift into park (reverse gear, if a manual transmission) and turn off the engine. Be conscious of vehicle's elevation.

7. **Stop** when the vehicle reaches the trailer endstop, shift into Park, apply the parking brake and if driving vehicle onto trailer, shut off the engine; if winching, put in Park and set parking brake.
8. Exit the vehicle carefully, and step down from now elevated **vehicle** on trailer to floor.
9. Secure vehicle in place; in most cases tie-downs or chains are a prudent approach, depending on the trailer. If you have winched the vehicle up, secure and lock the winch in addition.


D Driving (or winching) off the APEX Trailer Ramps

1. *Verify* the exit route is clear of personnel and obstructions.
2. Verify the wheels of the vehicle are correctly aligned with trailer and APEX Ramps.
3. Start the engine (if driving off). If winching, place vehicle in neutral.
4. Place your foot on the vehicle brake and then release the parking brake.
5. Shift into reverse (if driving off). If winching, unlock and start winch.
6. Have a spotter outside the vehicle observe and guide the driver straight off the ramps.
7. Drive (or winch) off **slowly** and *carefully*.
8. Drive (or winch) the vehicle down the ramps until it is on the garage floor and has completely cleared the ramps.
9. Place the vehicle in park and shut off the engine, if running.
10. **Clean** and store APEX Trailer Ramps.

C
3

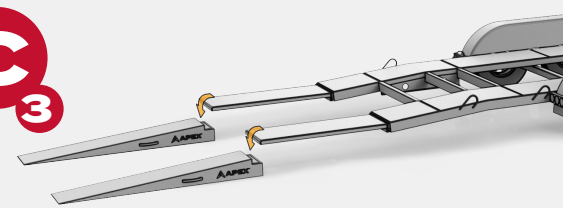


C
4

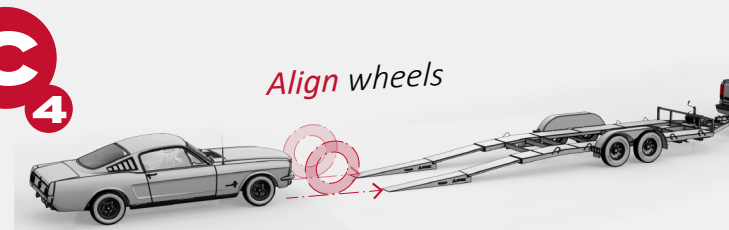 


C
5 & 6

 Drive onto

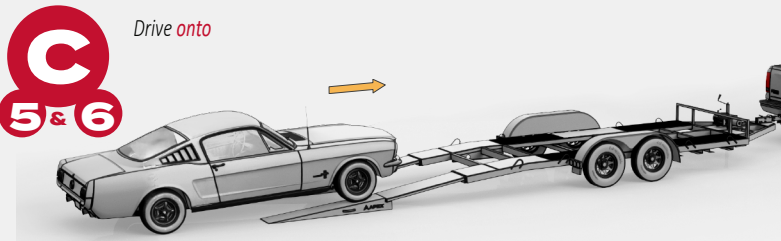

Drive on

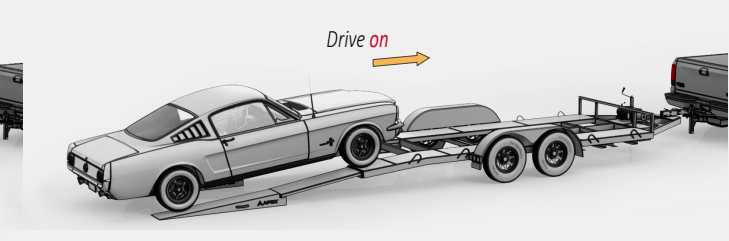 

C
7
8 & 9

Stop on; set parking brake

 


Secure vehicle on trailer




Carefully reverse above method to lower vehicle from Trailer


AR-335-54-TR KIT, SET OF 2: 5174138

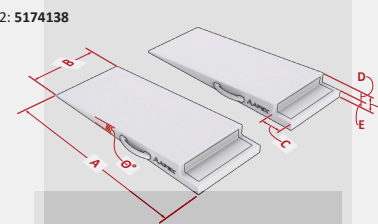


AR-450-58-TR KIT, SET OF 2: 5174145

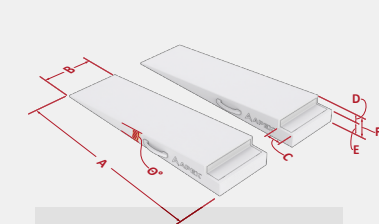 

AR-570-66-TR KIT, SET OF 2: 5174157

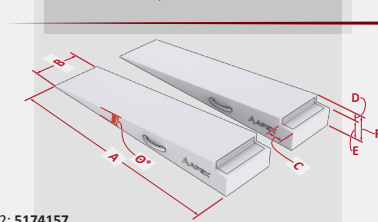 

AR-670-55-TR KIT, SET OF 2: 5174163

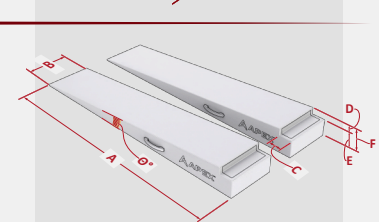 

Part Number	Description	Dim Ø (Ramp Angle)	Dim A (Length)	Dim B (Width)	Dim C (Cutout Depth)	Dim D (Cutout Height)	Dim E (Base Height)	Dim F (Total Height)
5174138	Lightweight Trailer Ramp, 36 in. (914 mm)	5.4°	36 in (914 mm)	14 in (355 mm)	4 in (100 mm)	2 in (50 mm)	1.5 in (39 mm)	3.5 in (89 mm)
5174145	Lightweight Trailer Ramp, 48 in. (1,219 mm)	5.9°	48 in (1219 mm)	14 in (355 mm)	4 in (100 mm)	2 in (50 mm)	3 in (77 mm)	5 in (127 mm)
5174157	Lightweight Trailer Ramp, 60 in. (1,524 mm)	6.6°	60 in (1524 mm)	14 in (355 mm)	4 in (100 mm)	2 in (50 mm)	5 in (128 mm)	7 in (178 mm)
5174163	Lightweight Trailer Ramp, 72 in. (1,829 mm)	5.5°	72 in (1829 mm)	14 in (355 mm)	4 in (100 mm)	2 in (50 mm)	5 in (128 mm)	7 in (178 mm)