

BMW Jack Pad Adapter (5216381) – Quick Start Guide



⚠ DANGER! Never work with an unbalanced vehicle on a Jack. Working on an unbalanced vehicle may cause property damage, severe injury, or death.

⚠ DANGER! Never work under a vehicle supported solely by a hydraulic or mechanical jack and adapter pad. Always use jack stands to prevent injury and/or vehicle damage.

⚠ DANGER! Stabilize the vehicle. Always chock the vehicle's wheels before jacking.

⚠ DANGER! Before use, always inspect the adapter pad and the vehicle jack for fractures, deformation or other damage which could cause injury to personnel or damage to the vehicle.

⚠ DANGER! Always ensure the jack point support on the vehicle is in good condition. Inspect for cracks or other deformation that may affect its performance and its mating with the AutoPuck.

⚠ WARNING! Always ensure the adapter pad is properly seated securely in the vehicles' approved jack point support. Improper seating can cause the jack or adapter to slip out, causing injury or damaging the vehicle.


⚠ WARNING! Jack the vehicle from the manufacturer's designated Jacking Points **ONLY**. Damage to the vehicle and/or severe injury may result when lifting from any other point on the vehicle. Always Jack in accordance with the vehicle owner's manual.

Using the Jack Pad Adapter:

You are responsible for safely Jacking the vehicle.

- Ensure the vehicle is on level ground – chock the wheels and engage the parking brake.
- Verify the surface under the vehicle is capable of supporting the weight of the Jack and the vehicle. Level, unbroken concrete is recommended.
- Ensure the area around the vehicle is clear.
- Do **NOT** jack a vehicle with people inside.
- Close the hood, trunk, and all doors.
- Ensure the adapter matches the vehicle you intend to jack. The wrong adapter pad may damage the vehicle or cause personal injury.
- Put the vehicle into "**Jack Mode**," if required.
- Push to install the BMW Jack Pad Adapter (5216379) into the vehicle's Jack Point Support. Consult the vehicle owner's manual for Jack Point Support locations.
- Move the Jack into position directly under the AutoPuck and carefully raise the Jack until it just touches the AutoPuck.
- Ensure the AutoPuck will ride securely on the Jack without slipping out.
- Slowly and carefully raise the vehicle.
- Never work on a vehicle that is unstable on the Jack.
- Carefully lower the vehicle after completing the work and move the vehicle jack out of the area.
- Remove the AutoPuck by pulling straight down.

Always remove the AutoPuck from the vehicle after use. The AutoPuck is *not* designed to be permanently installed in the vehicle's Jack Point Supports.

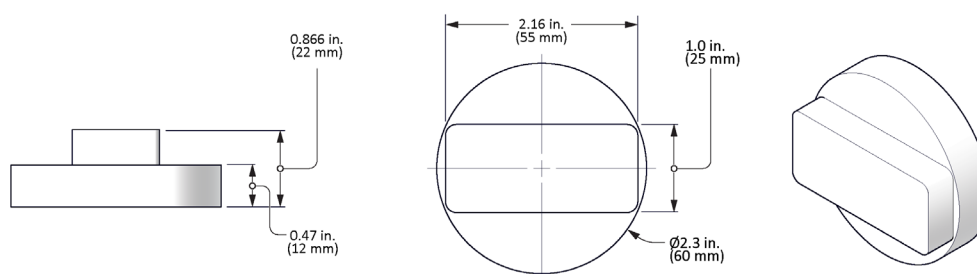

Specifications:

Material: Hard Rubber 95A Shore

Rated Capacity on each Jack Puck: **1,750 lbs. (794 kg)** max.

Rated Vehicle Jacking Capacity: 1 Jack Puck supporting each manufacturer's Jack Point Support: total **7,000 lbs. (3,175 kg)** Max.

Rated Temperature Range: -40°F (-40°C) to +104°F (+40°C) max.

General Warnings and Cautions:

- **Always** refer to the vehicle owner's manual for the exact locations of the factory-recommended jack point supports. Incorrect placement can result in the vehicle tilting or shifting, increasing the risk of it falling off the jack.
- **Never** place the AutoPuck or the jack itself on parts of the vehicle that are not designated as jack points. Lifting from non-recommended areas can damage components and can lead to unsafe lifting conditions.
- **Ensure** the AutoPuck is rated for the weight of your vehicle. Exceeding the weight capacity can cause the puck to deform or fail, potentially leading to vehicle damage and/or severe injury.
- **Verify** that the AutoPuck fits your vehicle's specific jack point supports. An improper fit can cause the vehicle to slip off the jack, leading to vehicle damage and/or severe injury.
- **Before placing the AutoPucks**, visually inspect the vehicle's jack point support for any damage or rust. A compromised jack point support may not support the vehicle's weight safely, even if it is the factory-recommended location.
- **Regularly inspect** the AutoPucks for any signs of wear, cracks, or other damage. Damaged AutoPucks can fail under load, causing the vehicle to drop unexpectedly.
- **Position** the vehicle jack directly under the AutoPuck installed in the vehicle's jack point support. Misalignment can result in unstable jacking and possible vehicle damage or severe personal injury.
- **Ensure** they are properly attached and won't slip out of place during use. Some AutoPucks are designed to attach securely to the jack point support or the jack itself.
- **Use** the AutoPuck on a flat, stable surface. Uneven or slippery surfaces can cause the jack to tip or move unexpectedly, which can be dangerous.
- **Avoid** using the AutoPucks in conditions that are too hot or too cold, as this can affect their structural integrity. Rubber and urethane materials can be sensitive to extreme temperatures.
- **Keep** the AutoPucks away from harsh chemicals, oils, and solvents that can degrade the material, reducing its effectiveness and lifespan.
- **Do not attempt** to overextend the jack lifting height beyond its rated limit by using multiple stacked pucks, or other non-OEM approved adapters. This can create instability and increase the risk of vehicle damage and/or severe personal injury.

