


Universal Jack Pucks (5216379) – Quick Start Guide

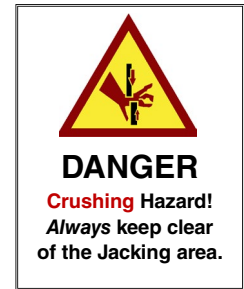

⚠ **DANGER!** *Never work with an unbalanced vehicle on a Jack. Working on an unbalanced vehicle may cause property damage, severe injury, or death.*

⚠ **DANGER!** *Never work under a vehicle supported solely by a hydraulic or mechanical jack. Always use jack stands to prevent injury and/or vehicle damage.*

⚠ **DANGER!** *Stabilize the vehicle. Always chock the vehicle's wheels before raising a vehicle using a floor jack.*

⚠ **DANGER!** *Before use, always inspect the AutoPucks and the jack for fractures, deformation or other damage which could cause injury to personnel or damage to the vehicle.*

⚠ **DANGER!** *Always ensure the jack point on the vehicle is in good condition. Inspect for cracks or other deformation that may affect its performance and its mating with the AutoPucks.*

⚠ **WARNING!** *Jack the vehicle from the manufacturer's designated jacking points **only**. Damage to the vehicle and/or severe injury may result when lifting from any other point on the vehicle.*

⚠ **WARNING!** *AutoPucks are not intended to be a structural or permanent load support. Do not modify the AutoPucks in any way.*

⚠ **WARNING!** *Appropriate protective equipment must always be worn during installation, including leather gloves, steel-toed work boots, eye protection, back belts, and hearing protection.*

Using the Universal Jack Pucks:

Users are responsible for safely Jacking or lifting the vehicle.

1. When using a floor jack, ensure the vehicle is on level ground. Chock the wheels and engage the parking brake.
2. Verify the surface under the vehicle is capable of supporting the weight of the jack and the vehicle. Level, unbroken concrete is recommended.
3. Ensure the area around the vehicle is clear.
4. Do **not** jack a vehicle with people inside.
5. Close the hood, trunk, and all doors.
6. Ensure the AutoPuck matches the vehicle you intend to jack. The wrong AutoPuck may damage the vehicle or cause personal injury.
7. Put the vehicle into "**Jack Mode**," if required.
8. Consult the vehicle owner's manual for jack point locations.
9. Move the jack or lift pads (with the AutoPuck(s)) into position directly under the vehicle manufacturers' approved jack points.
10. Ensure the AutoPucks will ride securely on the jack or lift pads without slipping out.
11. Slowly and carefully jack or raise the vehicle.
12. **Never** work on a vehicle that is unstable on the jack or lift pads.
13. Carefully lower the vehicle after completing the work and move the vehicle out of the area.
14. Remove the AutoPucks from the jack or lift pads.

SAFETY NOTICE: Users are responsible for safely jacking or lifting vehicles. Always follow the instructions provided by both the floor jack or lift manufacturer and the vehicle manufacturer.

Specifications:

Material: Hard Rubber/ 95A Shore

Rated Capacity on each AutoPuck: 1,750 lbs. (794 kg) max.

Rated Vehicle Jacking Capacity: (One AutoPuck for each factory recommended jack point) 7,000 lbs. (3,175 kg) max.

Rated Temperature Range: -40°F (-40°C) to +104°F (+40°C) max.

- **Always** refer to the vehicle owner's manual for the exact locations of the factory-recommended jack points. Incorrect placement can result in the vehicle tilting or shifting, increasing the risk of it falling off the jack or lift.
- **Never** position the AutoPucks, or the jack or lift, under parts of the vehicle that are not designated as jack points. Lifting from non-recommended areas can damage components and can lead to unsafe lifting conditions.
- Ensure the AutoPucks are rated for the weight of the vehicle. Exceeding the weight capacity can cause the puck to deform or fail, potentially leading to vehicle damage and/or severe injury.
- Before positioning the *AutoPucks*, visually inspect the vehicle's jack points for any damage or rust. A compromised (damaged, corroded, modified, or aftermarket) jack point may not support the vehicle's weight safely, even if it is the factory-recommended location.
- Regularly inspect the AutoPucks for any signs of wear, cracks, or other damage. Damaged AutoPucks can fail under load, causing the vehicle to drop unexpectedly.
- Position the AutoPucks directly under the vehicle's recommended jack points.
- Ensure they are properly seated on the jack or lift pad and won't slip out of place during use.
- Use AutoPucks only on a flat, stable surface. Uneven or slippery surfaces can cause the jack to tip or move unexpectedly, which can be dangerous.
- **Avoid** using the AutoPucks in conditions that are too hot (near exhaust components, brake assemblies or welding operations), or too cold, as these conditions can affect their structural integrity. Rubber and urethane materials can be sensitive to extreme temperatures.
- Keep the AutoPucks away from harsh chemicals, oils, and solvents that can degrade the material, reducing its effectiveness and lifespan.
- **Do not** attempt to overextend the jack lifting height beyond its rated limit by using multiple, stacked AutoPucks, or other non-OEM approved adapters. This can create instability and increase the risk of vehicle damage and/or severe personal injury.

