


QUICK-START GUIDE

QUICKJACK™ CASTER KIT

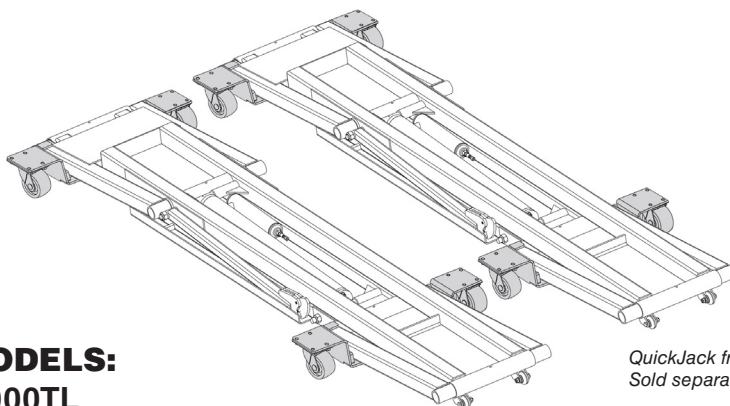


QuickJack frames not included.
Sold separately.

FITS QUICKJACK MODELS: 6000TL / 6000ELX / 8000TL

The QuickJack Caster Kit gives compatible 6000ELX, 8000TL, and 6000TL series portable car lift frames smooth-gliding mobility for easier setup, storage, and one-handed positioning. Designed for heavier QuickJack models, this factory caster kit helps reduce dragging and makes it easier to move the lift frames across the garage floor before lifting.

Note: The QuickJack Caster Kit adds an additional 7.16 in. (182 mm) to the overall width of the QuickJack.

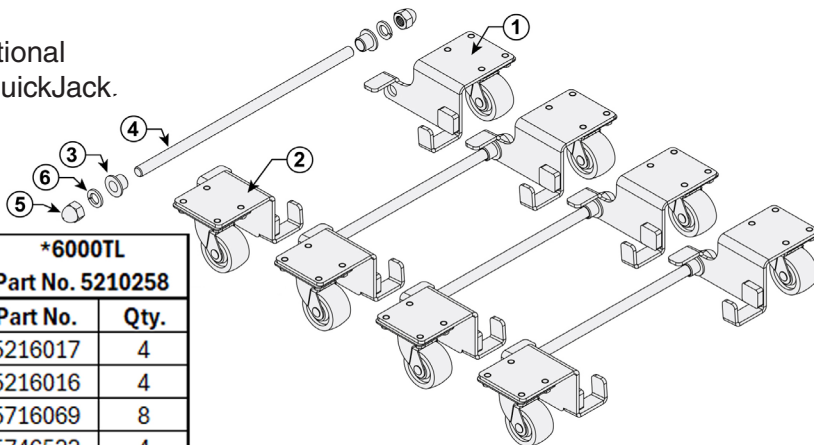

		*6000ELX/8000TL Part No. 5210278		*6000TL Part No. 5210258	
Item No.	Description	Part No.	Qty.	Part No.	Qty.
1	Caster Assembly, R.H.	5216080	4	5216017	4
2	Caster Assembly, L.H.	5216079	4	5216016	4
3	Tube Insert	5716070	8	5716069	8
4	Threaded Rod	5746572	4	5746522	4
5	Nut	5535037	8	5525037	8
6	Lock Washer	5545201	8	5545201	8

* 6000TL is backward compatible with the 5000TL/TLX models

* 6000ELX/8000TL is backward compatible with the 7000TL/TLX models

⚠ WARNING California Proposition 65: This product can expose you to chemicals including styrene and vinyl chloride which are on the list of over 900 chemicals identified by the State of California to cause cancer, birth defects or reproductive harm. Always use this product in accordance with BendPak's instructions. For more information, visit www.p65warnings.ca.gov.

⚠ WARNING Lower the QuickJack frames to the ground and then disconnect the hydraulic hoses before performing the assembly procedure.

⚠ WARNING Casters should only make contact with the ground in the fully lowered position. When the QuickJack rises, the casters must rotate off the ground and the frame must rest on the concrete.

⚠ WARNING If the garage has a floor drain or a sloped section, the frame may roll away while you are trying to align the lifting blocks.


⚠ WARNING Casters can allow the heavy QuickJack to roll freely across the floor. The jack must be positioned parallel to the vehicle, it can roll, shift, or slide under the car and move out of position. Always double-check the QuickJack is aligned with the lifting points before raising.

⚠ WARNING QuickJack frames are heavy, and when the Casters are installed, they may roll unexpectedly. Store the QuickJack frames so that they cannot cause a tripping or slip injury.





Assembly:


1. Remove the Nuts (A) and Lock Washers (B) from each end of the Rod (C), at the end of the QuickJack Frame (D), as shown in the illustration to the right.
2. Remove the Rod, being careful not to allow the QuickJack frames and Support Arms (E) to separate.

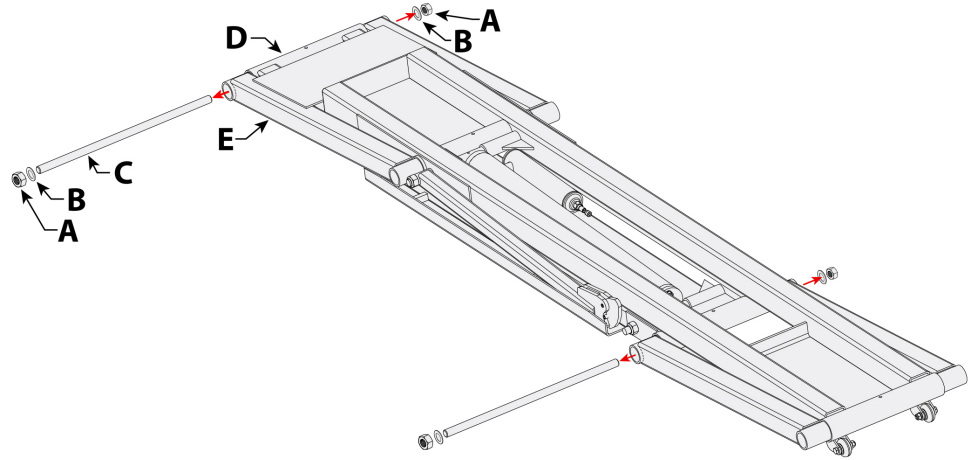

3. Press both Inserts into position in the openings on the frame where the Rod was removed
4. Position one of the Left Hand Casters onto the QuickJack Frame, as shown in the two illustrations below.

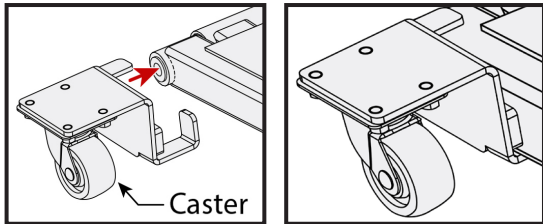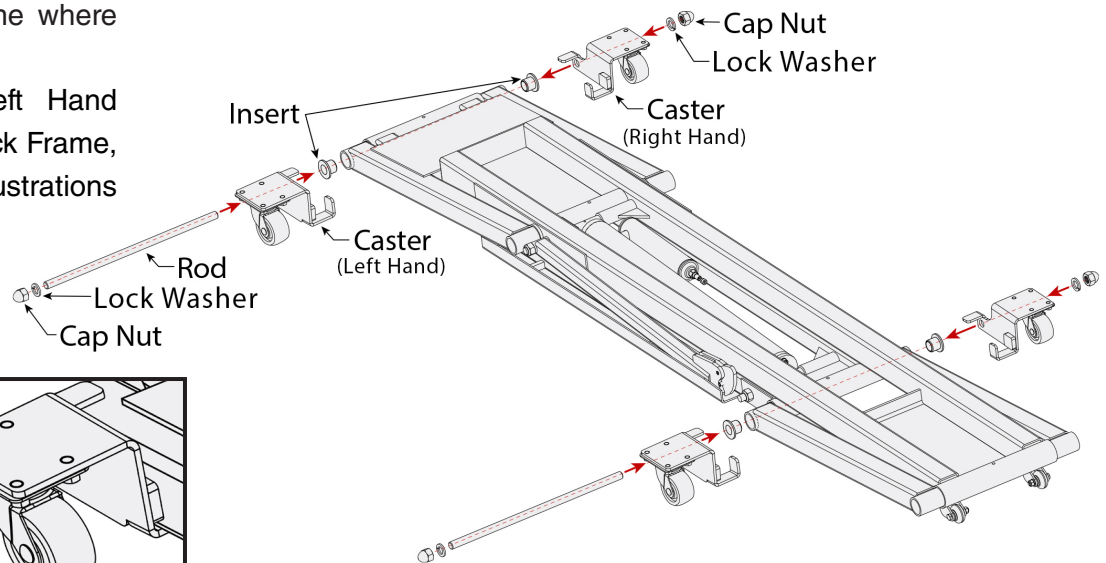

5. Position one of the Right Hand Casters onto the QuickJack Frame on the opposite side.
6. Insert the new Rod through the Casters and QuickJack Frame Assembly as shown in the illustration above.
7. Assemble one Lock Washer and Cap Nut to each end of the Rod.
8. Tighten each Cap Nut securely.
9. Repeat steps 1-8 for the two remaining Casters on the opposite end of the QuickJack, and for the Casters on other QuickJack frame.

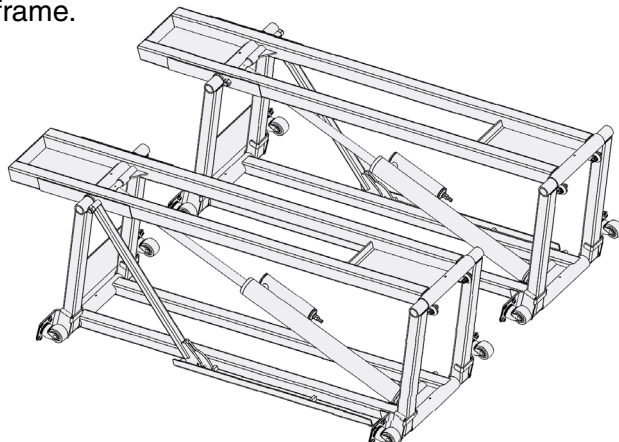

Scan QR Code
to learn more
about **QuickJack**
accessories.



QUICKJACK™

30440 Agoura Rd.
Agoura Hills, CA 91301 USA
Toll Free: (888) 262-3880

For more help, visit us at quickjack.com/support
or email us at support@quickjack.com