

BendPak Technical Service Bulletin DST-30P Balancer Voltage Selector

BendPak TSB 202-042026

This Technical Service Bulletin provides clarity on how to select the proper voltage for the DST-30P Tire Balancer.

⚠ DANGER *All* electrical work (including wiring a plug to the end of a Power Cord) **must** be accomplished by a licensed electrician. Not using a licensed electrician voids the warranty and puts everyone who uses the Balancer in danger of injury or, in rare cases, death.



⚠ WARNING Make sure the Balancer is disconnected from power before selecting the voltage.

⚠ CAUTION The setting of the Voltage Selector Switch on the back of the Balancer **must** match the power source. If the Balancer is connected to the incorrect supply voltage, the warranty is void and the balancer will likely be damaged.

The Voltage Selector Switch is located on the back of the Balancer, as shown to the right.

The DST-30P comes **pre-configured for 230V**. Before wiring for 230V, confirm that the Voltage Selector Switch is set for 230V, as shown below.

If configuring for 115V, press the top of the Voltage Selector Switch, as shown below.

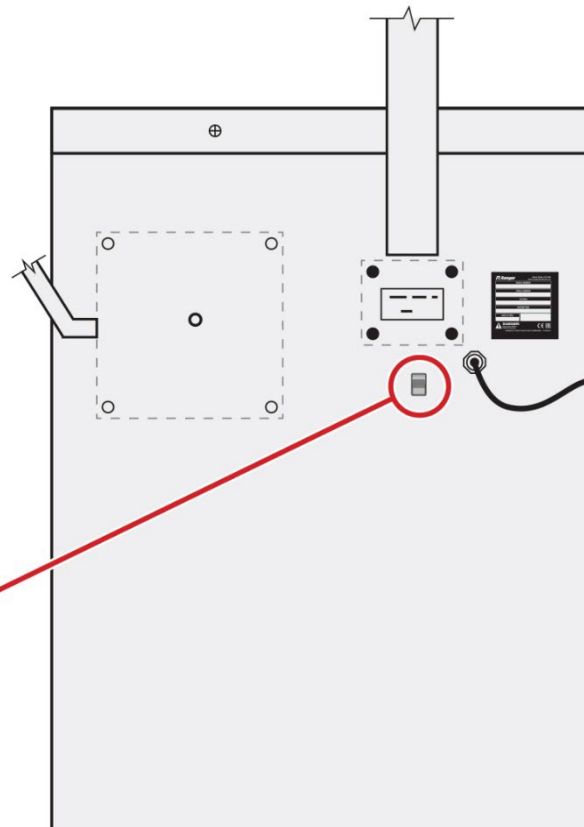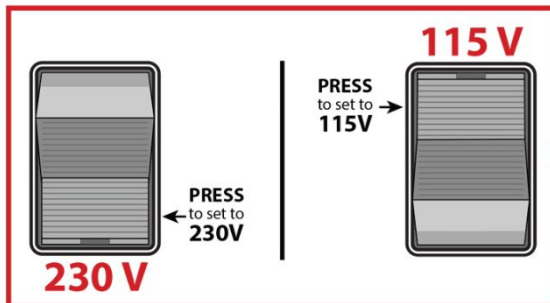

Back of Balancer

If you experience difficulties with your Tire Balancer, technical support and service is available from your dealer, on the Web at bendpak.com/support, by email at support@bendpak.com, or by phone at **(800) 253-2363**, follow the prompts to reach service. Online chat is also available at www.bendpak.com.

Bulletin de Service Technique BendPak Sélecteur de tension du régulateur DST-30P

BendPak TSB 202-042026

Cette note de service technique fournit des précisions sur la manière de sélectionner la tension appropriée pour l'équilibreuse de pneus DST-30P.

DANGER

Tous les travaux électriques (y compris le câblage d'une prise à l'extrémité d'un cordon d'alimentation) doivent être réalisés par un électricien agréé. Ne pas utiliser un électricien agréé annule la garantie et met en danger toute personne utilisant le Balancer, pouvant entraîner des blessures ou, dans de rares cas, la mort.

WARNING

Assurez-vous que le régulateur est déconnecté de l'alimentation avant de sélectionner la tension.



CAUTION

Le réglage de l'interrupteur de sélection de tension à l'arrière de l'équilibreur doit correspondre à la source d'alimentation. Si l'équilibreur est connecté à une tension d'alimentation incorrecte, la garantie est annulée et l'équilibreur sera probablement endommagé.

Le commutateur de sélection de tension se trouve à l'arrière de l'équilibreur, comme illustré à droite.

Le DST-30P est **préconfiguré pour 230 V**. Avant de le câbler pour 230 V, confirmez que le commutateur de sélection de tension est réglé sur 230 V, comme indiqué ci-dessous.

Si vous configurez pour 115 V, appuyez sur le haut du commutateur de sélection de tension, comme indiqué ci-dessous.

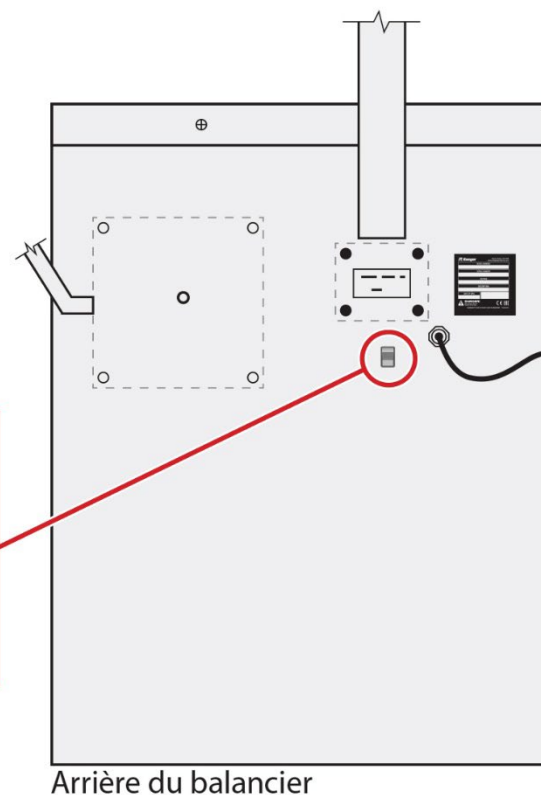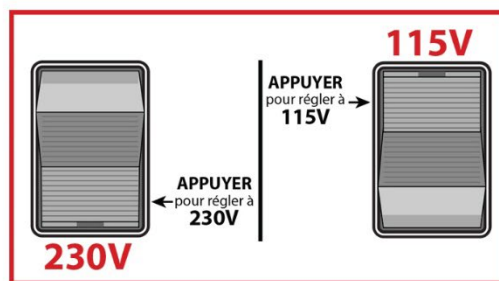

Si vous rencontrez des difficultés avec votre équilibrage de pneus, l'assistance technique et le service sont disponibles auprès de votre revendeur, sur le Web à bendpak.com/support, par e-mail à support@bendpak.com, ou par téléphone au **(800) 253-2363**, suivez les instructions pour joindre le service. Le chat en ligne est également disponible sur www.bendpak.com.